

PERMAGUARD®

SUPERIOR STAIN RESISTANCE

SUPERIOR STAIN RESISTANCE

PERMAGUARD® is a newly developed topcoat protective finish that permits frequent cleaning of coated fabrics for upholstery.

The use of this proprietary barrier coating makes maintenance easy. Most difficult stains are effortlessly cleaned with a dry cloth, and stubborn soiling may be eliminated with isopropyl alcohol. Not only do stains disappear in seconds, but PERMAGUARD® provides unequaled resistance to scratches, scuffs, and abrasion.

CARE AND CLEANING GUIDE

Step 1: Only a dry white cloth is needed when stains are fresh and removed immediately.

Step 2: More stubborn soiling may be eliminated using a mix of 75% isopropyl alcohol and 25% clear water.

Step 3: Rinse thoroughly with clear water.

Step 4: Pat dry with a damp white cloth.

Step 5: For cleaning that requires Step 2, use a soft cotton cloth and rub the stain in circles 10 times. Pat dry with another soft cotton cloth and check the results.

**The Care and Cleaning Guide is available in multiple languages.*


HOW IT WORKS

PERMAGUARD® acts as an invisible barrier against stains, allowing them to be cleaned off the surface with ease and virtually no harm to the vinyl.

PERMAGUARD®
SUPERIOR STAIN RESISTANCE

Coated Fabric

Polyester Backing

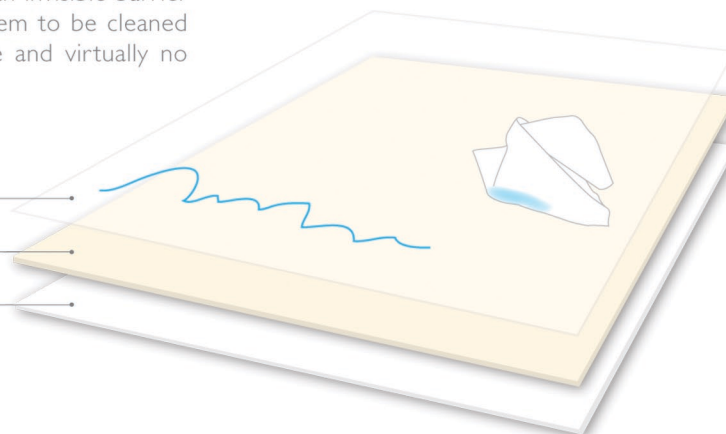

The information published in this care guide refers to the performance of PERMAGUARD® products in specific tests conducted under laboratory conditions. Results may vary under actual conditions. This information is not a guarantee and does not relieve the user from the responsibility of the proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of vinyl. Mayer Fabrics assumes no responsibility resulting from the use of such cleaning agents to the vinyl. Spradling's coated fabrics treated with PERMAGUARD® protective finish are resistant to most common stains. However existing dyes and pigments in some staining agents have the ability to create a permanent stain if not treated properly. Please consult our cleaning instructions (available upon request) for more details. Spradling coated fabrics are manufactured to the highest standards, as outlined in our product specifications. However, during fabrication of finished products, urethane foam laminates that come into contact with vinyls can damage or discolor them. In particular, certain urethane foams can cause yellowing and it is prudent to specify those that are compatible with vinyls. Typically, BHT- and BHEB-free urethane foams with low amine volatility are satisfactory. PERMAGUARD® is a registered trademark.